


## EXTERIOR/INTERIOR TRIM > Front Bumper

### REMOVAL

1. Disconnect the ground cable from the battery.
2. Remove the right and left nozzle covers from the nozzle assembly. (vehicle with head light washer)

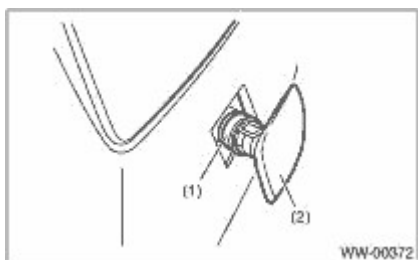


(1) Nozzle ASSY

(2) Nozzle cover


### CAUTION:

**Take care not to damage the front bumper.**


3. Disengage the three clips, and then remove the mud guard and front under cover.

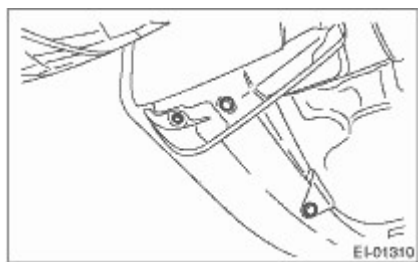


4. Turn over the mud guard, and remove one inside clip that secure the front bumper to the fender.

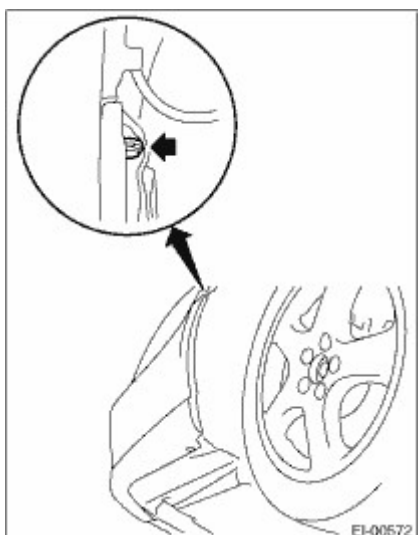


5. Turn over the mud guard and disconnect the fog light connector.
6. Remove the seven clips, and then lightly pull the bumper to remove it.

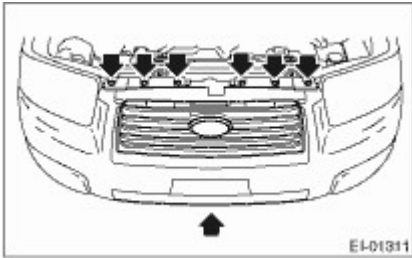

**7.** Remove the right and left nozzle assembly. (vehicle with head light washer)

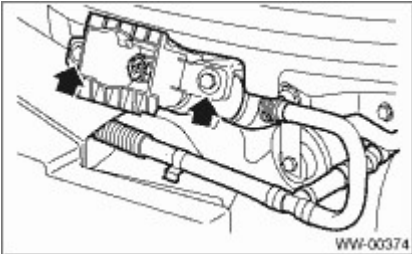


**8.** Disconnect the nozzle assembly from the hose. (vehicle with head light washer)

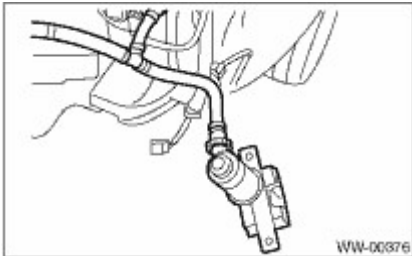


**9.** Disconnect the hose from the washer tank. (vehicle with head light washer)

**10.** Remove the E/A form from bumper beam.

Do not apply excessive force to remove the E/A form because it is easily damaged.

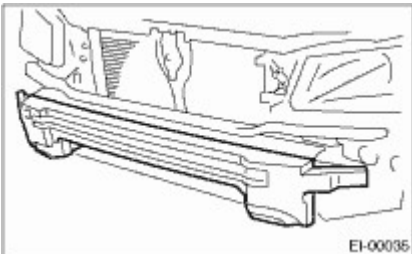

**11.** Remove the bumper beam.

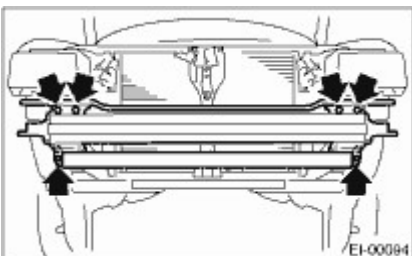

**12.** Remove the 8 bolts and disassemble the front bumper beam.

