
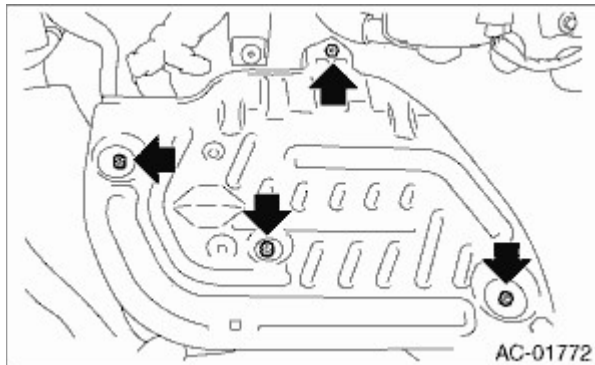


HVAC SYSTEM (HEATER, VENTILATOR AND A/C) > Blower Motor Unit Assembly

REMOVAL

1. Disconnect the ground cable from battery.
2. Remove the instrument panel lower. 
3. Remove the engine ECM protect cover.



4. Disconnect the intake door actuator and blower motor connectors.
5. Remove the relay holder.
6. Remove the bolts and nuts to remove blower motor unit assembly.

