


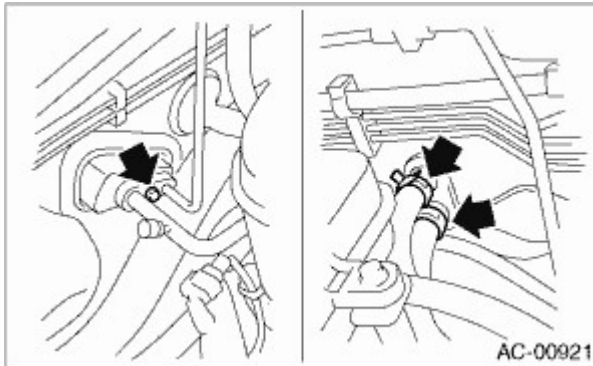



## HVAC SYSTEM (HEATER, VENTILATOR AND A/C) > Heater and Cooling Unit



### REMOVAL

1. Disconnect the ground cable from battery.
2. Using the refrigerant recovery system, discharge refrigerant. 
3. Drain coolant from the radiator.
  - Except for STI model: 
  - STI model: 
4. Remove the bolts securing expansion valve and pipe in engine compartment. Release the heater hose clamps in engine compartment to remove the hoses.
  - LHD model

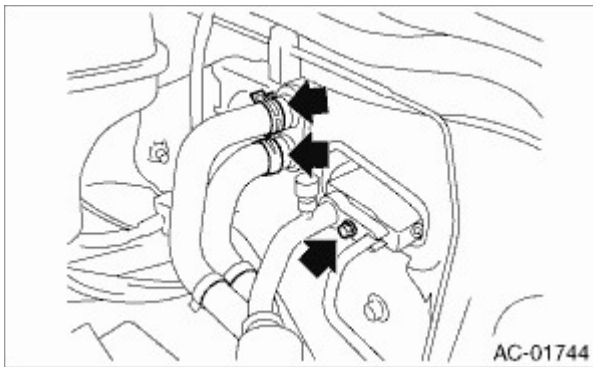

- RHD model



5. Remove the instrument panel. 
6. Remove the blower motor unit assembly. 
7. Disconnect the connectors of the actuator, thermo sensor, power transistor and blower resistor.
8. Remove the bolt and nuts and remove the heater and cooling unit.

