


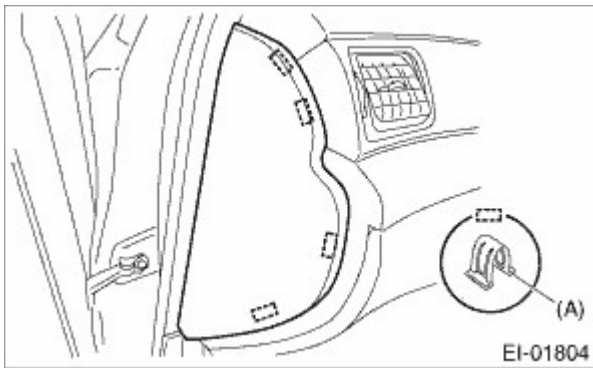
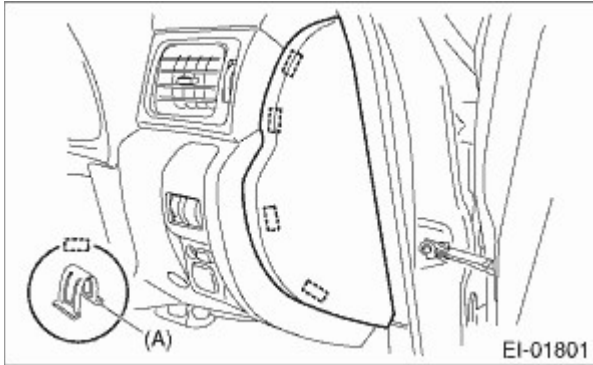
## EXTERIOR/INTERIOR TRIM > Instrument Panel Assembly





### REMOVAL

#### CAUTION:

**Be careful not to damage the airbag system harness when servicing the instrument panel. Damage may cause the system to malfunction.**

1. Disconnect the ground cable from battery.
2. Remove the front pillar upper trim. 
3. Remove the plastic hook (A), and remove the instrument panel side cover.





4. Remove the console box. 
5. Remove the console front panel. 
6. Remove the instrument panel lower cover. 
7. Remove the steering shaft assembly. 
8. Disconnect connectors.

#### NOTE:



**To make reassembly easier, place matching markings on connectors as necessary.**

9. Remove the bolts and fuse box on the driver's side.

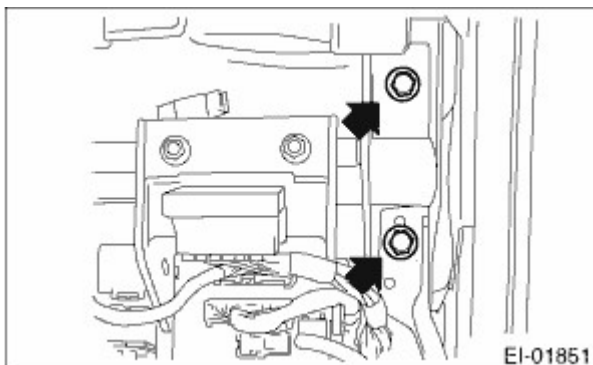

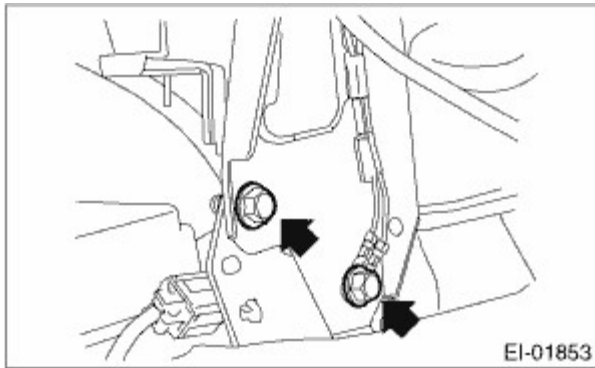

**10.** Remove the bolts on the passenger's side.

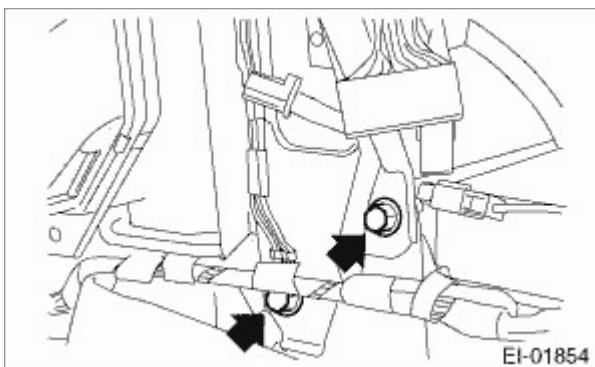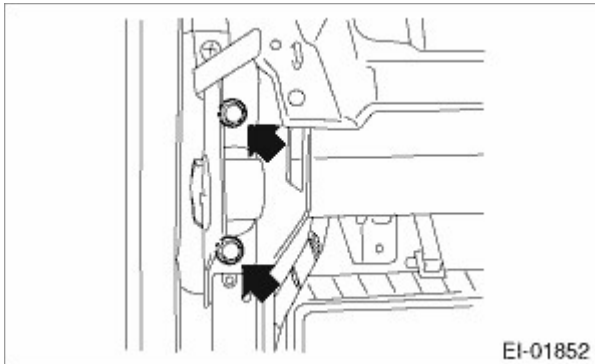

**11.** Make sure that the connectors are disconnected, and remove the instrument panel from the vehicle.

**CAUTION:**

**When taking the instrument panel out of the vehicle, be careful not to damage the vehicle. Perform this work by a group of two persons or more.**

**12.** Remove the steering support beam bracket.

