

PERIODIC MAINTENANCE SERVICES > Transmission Gear Oil

REPLACEMENT

1. MANUAL TRANSMISSION


1. Drain the gear oil by removing drain plug (A) and (B).

CAUTION:

If any transmission gear oil is spilled on the exhaust pipe, wipe off completely to prevent fires or emission of smoke.

NOTE:

Before starting work, cool off the transmission gear oil well.

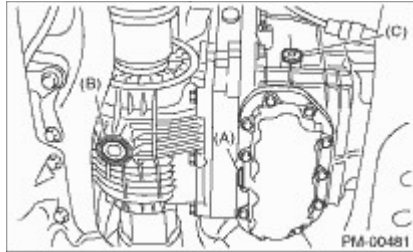

- (A) Drain plug (oil pan side)
- (B) Drain plug (clutch housing side)
- (C) Filler plug

2. Replace the gasket with new part, and then tighten the drain plug (A) and (B) to specified torque.

Tightening torque:

Oil pan side

50 N·m (5.1 kgf-m, 36.9 ft-lb)

Clutch housing side

70 N·m (7.1 kgf-m, 51.6 ft-lb)

3. Remove the filler plug and add transmission gear oil up to the lower edge of the filler plug hole.

CAUTION:

- **Carefully refill oil while watching the level. Excessive or insufficient oil must be avoided.**
- **Make sure to check the fluid level with the vehicle parked at a flat horizontal position.**

Recommended gear oil:

Refer to "RM" section. 

NOTE:

Each oil manufacturer has its base oil and additives. Thus, do not mix two or more brands.

Gear oil capacity:



4. Replace the gasket with new part, and then tighten the filler plug to specified torque.

Tightening torque:

50 N·m (5.1 kgf-m, 36.9 ft-lb)