

## ENGINE (DIAGNOSTICS)(H4DOTC) > Diagnostic Procedure with Diagnostic Trouble Code (DTC)

### DTC P0244 TURBO/SUPER CHARGER WASTEGATE SOLENOID "A" RANGE/PERFORMANCE

#### DTC DETECTING CONDITION:

Immediately at fault recognition


#### TROUBLE SYMPTOM:


Poor driving performance

#### CAUTION:

After servicing or replacing faulty parts, perform Clear Memory Mode  and Inspection Mode 

#### WIRING DIAGRAM:

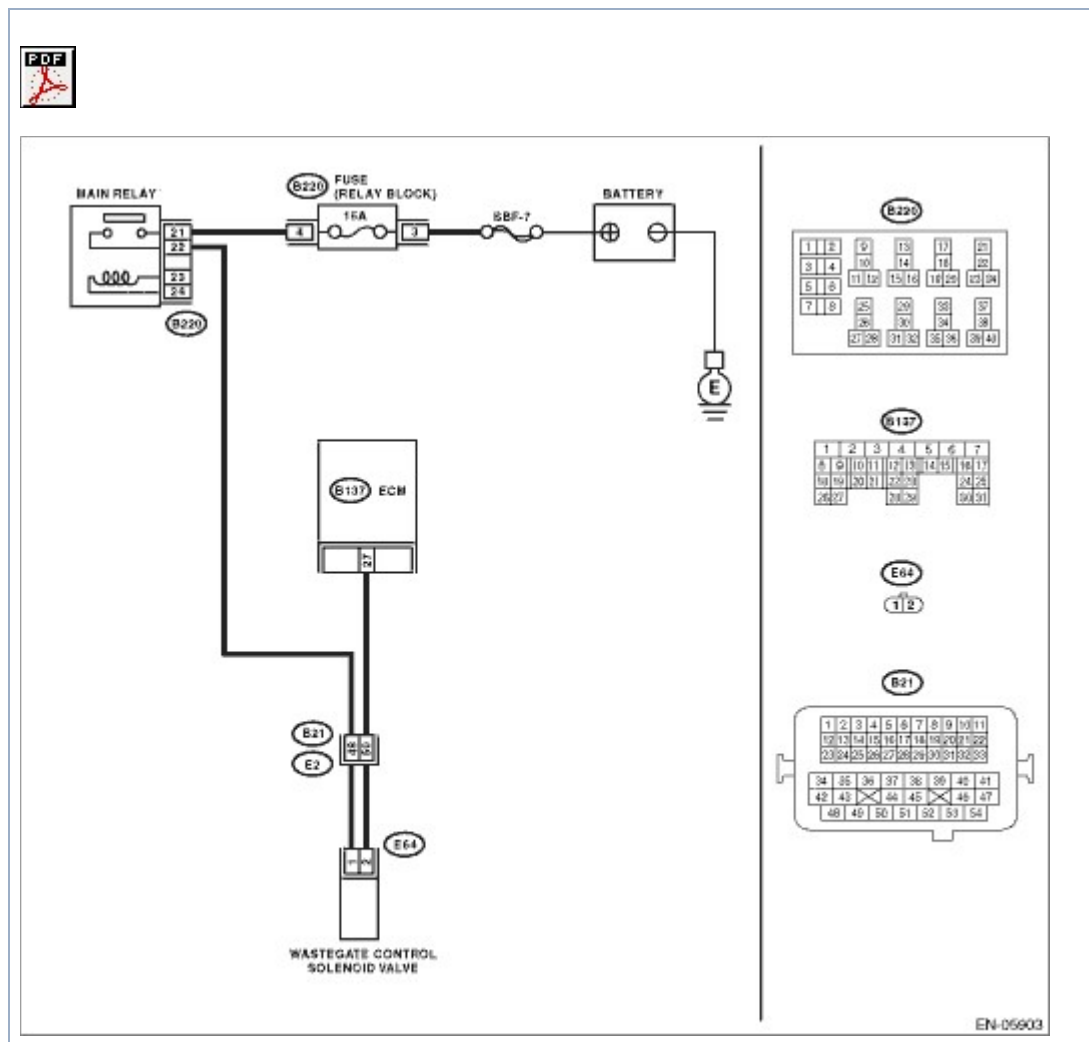

STEP	CHECK	YES	NO
<b>1.CHECK FOR ANY OTHER DTC ON DISPLAY.</b>	Is any other DTC displayed?	Check the appropriate DTC using the "List of Diagnostic Trouble Code (DTC)". 	Replace the wastegate control solenoid valve. 