






GLASS/WINDOWS/MIRRORS > Remote Control Mirror System


NOTE

For removal of each component of the remote control mirror system, refer to the respective section.


- Scalp cap 
- Outer mirror assembly 
- Outer mirror 
- Remote control mirror switch 

GLASS/WINDOWS/MIRRORS > Scalp Cap**REPLACEMENT**

1. Remove the mirror. 
2. Disengage the clip (A) from inside of outer mirror, then remove the scalp cap.

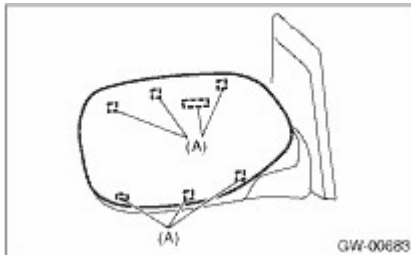

3. Disengage the clip (A) and (B) from inside of outer mirror, then remove the mirror body cover.

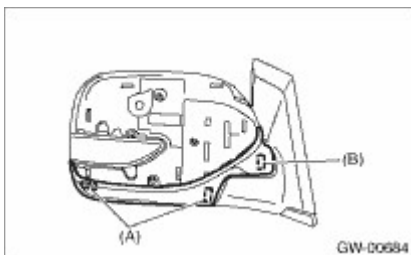
**CAUTION:**


The clip (B) can not be disengaged from inside of outer mirror. Be careful not to damage the part when removing it.

4. Secure the scalp cap and mirror body cover with clips (A).

GLASS/WINDOWS/MIRRORS > Outer Mirror Assembly

REMOVAL


1. Remove the front door trim. 
2. Disconnect the outer mirror connector.
3. Remove the bolts to remove outer mirror assembly.

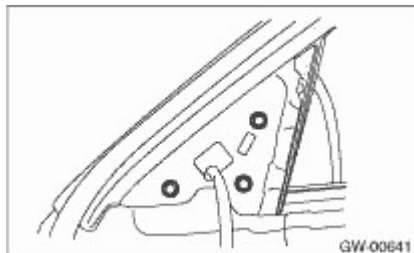


GLASS/WINDOWS/MIRRORS > Outer Mirror

REPLACEMENT

1. Face the mirror upward.
2. Lift up the lower and outer side of the mirror to disengage the hooks (1) and (2).

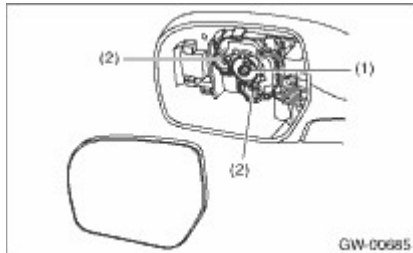

3. Disconnect the mirror heater connector from side of the mirror. (Model with mirror heater)

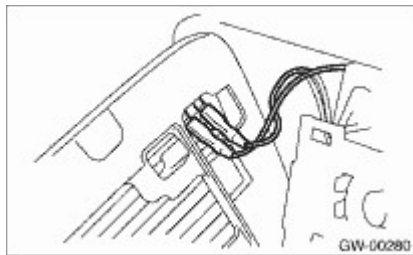

4. Install the mirror in hook (1), and install the worms in hooks (2).

CAUTION:

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
- When installing the mirror, insert the hook and clip securely.