


\*1 : LHD MODEL : WL  
RHD MODEL : WR

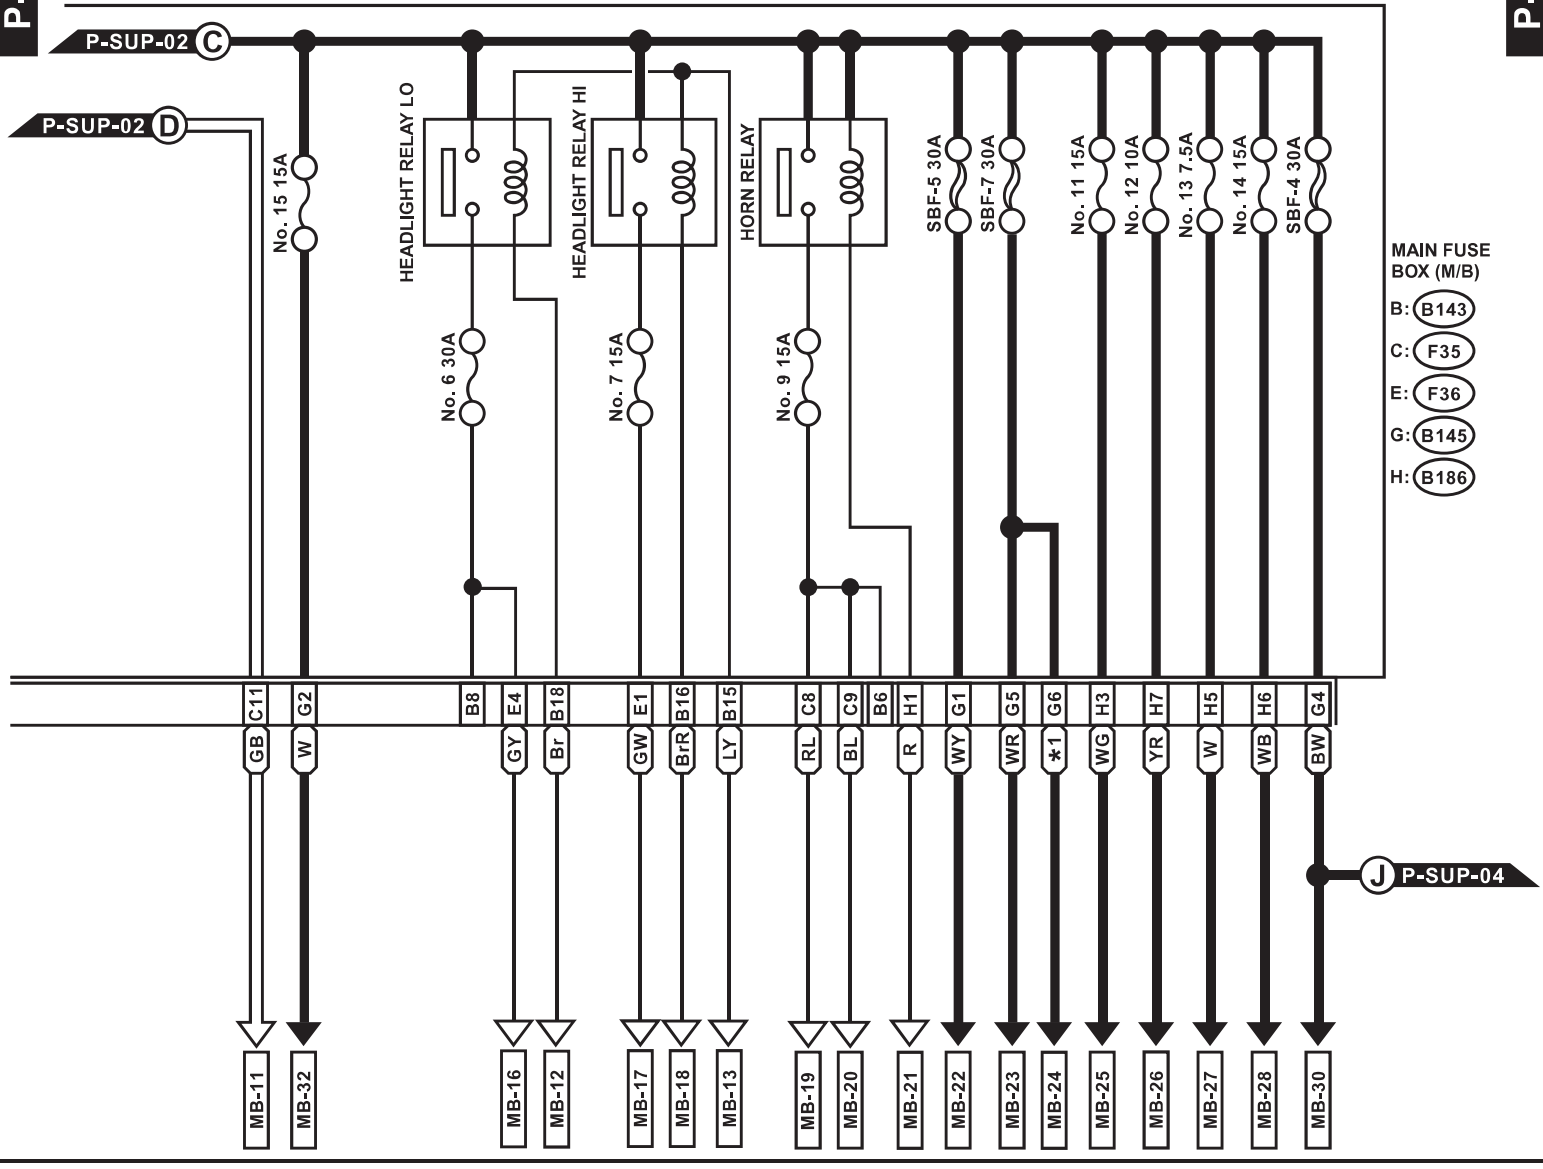

MAIN FUSE BOX (M/B)  
 B: (B143)  
 C: (F35)  
 E: (F36)  
 G: (B145)  
 H: (B186)

G: (B145) (BROWN)  
 E: (F36)

1	2	3
4	5	6
7		

H: (B186)

1	2	3
4	5	6
7	8	

C: (F35) (BLUE)

1	2	3	4	5
6	7	8	9	10
11	12			

B: (B143)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							