

GLASS/WINDOWS/MIRRORS > Power Window System

OPERATION

1. RESET OPERATION A

1. Sit in the driver's seat and close the door.
2. Turn the ignition switch to ON.
3. Operate the switch - power window main to open the glass assembly - front door halfway.
4. Operate the switch - power window main in "UP" direction to fully close the glass assembly - front door on the driver's side.
5. While the glass assembly - front door is fully closed, hold down the switch - power window main in "UP" direction for one second.
6. Operate the switch - power window main in "AUTO DOWN" direction to check whether the window fully opens properly.

NOTE:

If the window does not fully open properly, repeat steps 1) to 6).

2. RESET OPERATION B

1. Sit in the driver's seat and close the door.
2. Turn the ignition switch to ON.
3. On the glass assembly - front door of the driver's side, operate the "AUTO UP" function (fully pull up the switch) using the switch - power window main, and perform auto-reverse operations 10 times in a row (after the window fully closes, it slightly opens).
4. Check that the "AUTO UP" function no longer operates.
5. Perform reset operation A.
6. Check that the window operates properly by operating the "AUTO UP" and "AUTO DOWN" switch.

NOTE:

If the window does not fully open/close properly, repeat steps 1) to 6).