

SECURITY AND LOCKS > Keyless Transmitter


REPLACEMENT

1. KEYLESS TRANSMITTER REGISTRATION

NOTE:

- A maximum of four keyless transmitters can be registered for each individual vehicle.
- When replacing or adding the keyless transmitter, new registration of transmitter is necessary.
- When replacing the keyless transmitter (key), registration for the immobilizer system is also necessary.

1. Remove the keyless transmitter from ignition switch.
2. Remove the driver's side lower trim cover, connect the registration connector. (white connector with single pole)
3. Push the door lock switch (1) at the power window main switch to UNLOCK. (Room light blink and buzzer sound indicate that system is in registration mode.)

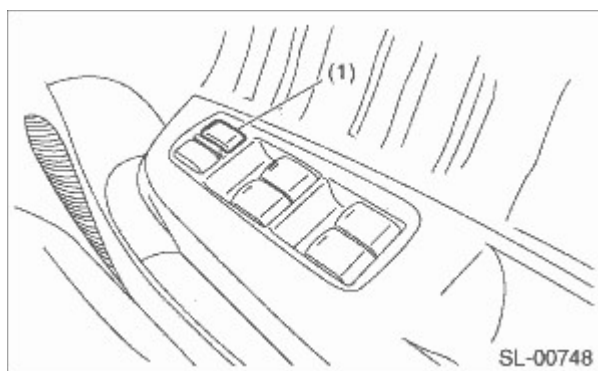

4. Push the button of the keyless transmitter to be registered twice with door lock switch pushed to UNLOCK.
5. When the registration is completed normally, door lock actuator performs Lock → Unlock operation. If Lock → Unlock operation is not performed, retry step 4).

NOTE:

- When pushing the button of the keyless transmitter, press the button slowly twice, and on the second press, hold down the button to check the door lock actuator operation.
- Do not push the button on the keyless transmitter more than twice.
- Do not push the button on the keyless transmitter repeatedly.

6. If there is any additional keyless transmitter to be registered, repeat step 4).
7. Remove the registration connector, and install the driver's side lower trim cover.

NOTE:

- Keyless transmitter can be registered only with the door lock switch pushed to UNLOCK.
- When the door lock switch is released once, if the door lock switch is kept pushed to UNLOCK again, registration can be performed.
- When additionally registering new keyless transmitters, it will be necessary to re-register keyless transmitters that were already registered.

2. CLEAR THE REGISTRATION OF KEYLESS TRANSMITTER

1. Remove the keyless transmitter from ignition switch.

- 2.** Remove the driver's side lower trim cover, connect the registration connector. (white connector with single pole)
- 3.** Push the door lock switch under the power window main switch to LOCK. (Room light blink and buzzer sound indicate that system is in clear mode.)
- 4.** Insert and remove the key into/from the ignition switch 10 times within 10 seconds with door lock switch pushed to LOCK.
- 5.** When the registration is cleared normally, door lock actuator performs Lock → Unlock operation. If Lock → Unlock operation is not performed, retry step 4).
- 6.** Remove the registration connector, and install the driver's side lower trim cover.

NOTE:

- **Registration can be cleared only with the door lock switch pushed to LOCK.**
- **When the door lock switch is released once, if the door lock switch is kept pushed to LOCK again, the clear mode can be performed.**
- **Finish the registration mode before switching from registration mode to clearance mode. Otherwise the mode can not be switched to the clear mode. And vice versa.**