


EXTERIOR/INTERIOR TRIM > Door Trim**REMOVAL****1. FRONT DOOR**

1. Disconnect the ground cable from battery.
2. Remove the gusset cover.

(1) Pull the gusset cover backward to detach the claws (A) on the backside of the gusset cover.

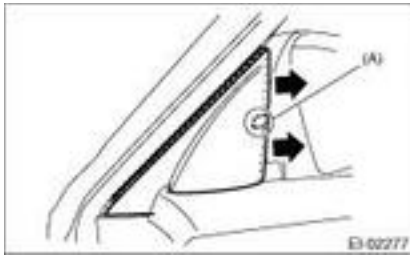


(2) Insert a plastic remover into the position shown in the figure while retaining the condition in step (1), and lift up the gusset cover.




(3) Remove the gusset cover in the direction of the arrow to detach the clip section (B), and disconnect the connector.



3. Open the cover of the inner remote section, and remove the screws.

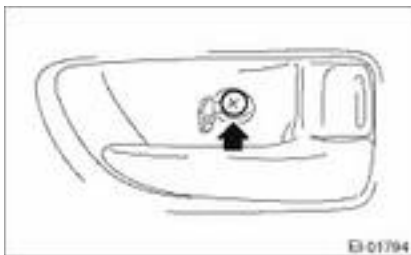


4. Remove the power window switch panel.

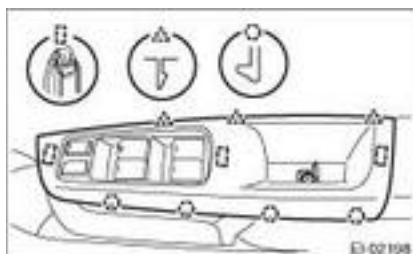

- (1) Open the cover and remove the screws.
- (2) Lift up the top of switch panel by using a plastic remover.




- (3) Remove the side claws by using a plastic remover.

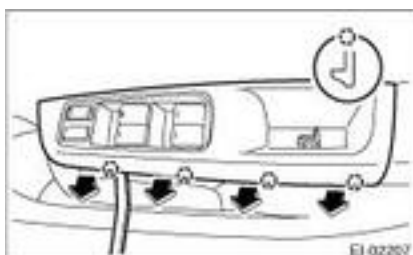


- (4) Remove the power window switch panel.

5. Remove the door trim screws.

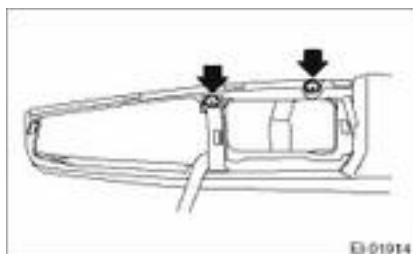


6. Remove the door trim.

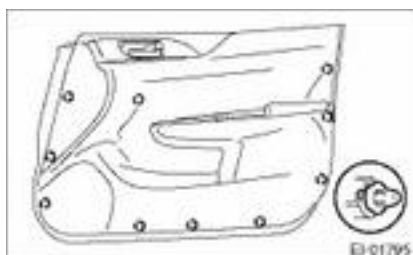


- (1) Remove the clips, then lift the door trim.

NOTE:

Insert a plastic clip remover into the slit at the bottom of the door trim, to lift the door trim.

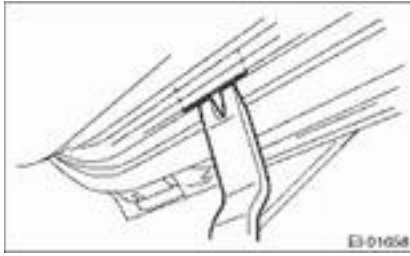

(2) Remove the cable (1) and (2) from the cable holder of inner remote.

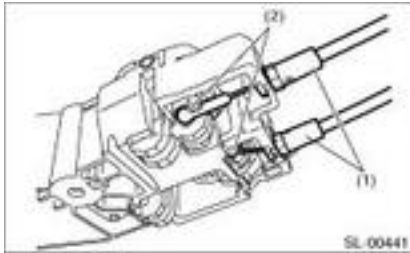


(3) Disconnect the harness connector and remove the door trim.


2. REAR DOOR

1. Disconnect the ground cable from battery.
2. Remove the gusset cover.


(1) Push gusset cover in direction of vehicle front to detach the claws (A) on the backside of the gusset cover.

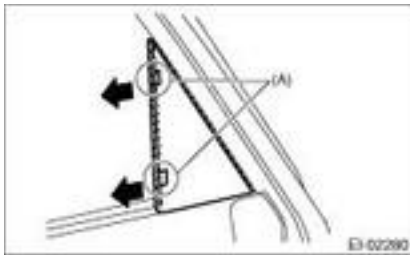


(2) Insert a plastic remover into the position shown in the figure while retaining the condition in step (1), and lift up the gusset cover.

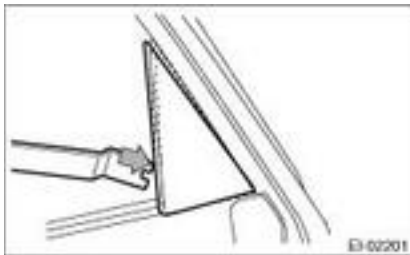


(3) Remove the gusset cover in the direction of the arrow to detach the clip section.

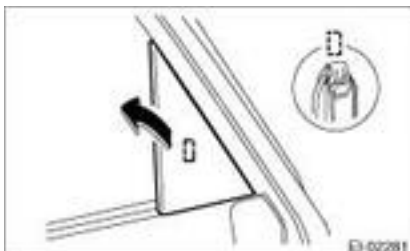

- 3.** Open the cover of the inner remote section, and remove the screws.

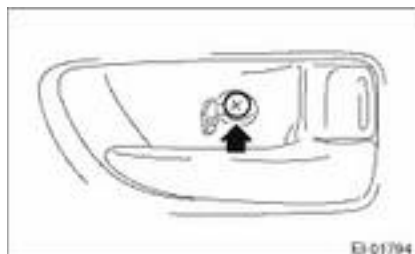


- 4.** Remove the power window switch panel.

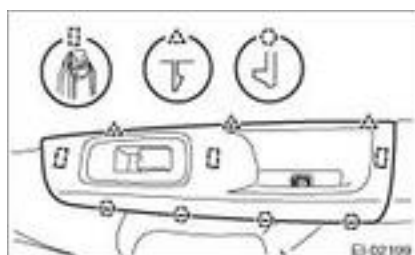

- (1) Open the cover and remove the screws.
(2) Lift up the tip of switch panel by using a plastic remover.




- (3) Remove the side claws by using a plastic remover.

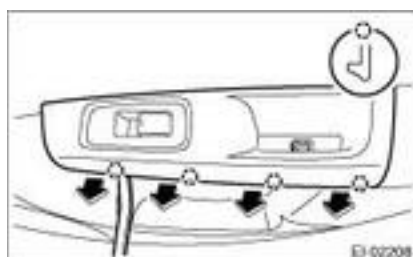

- (4) Remove the power window switch panel.

- 5.** Remove the door trim screws.

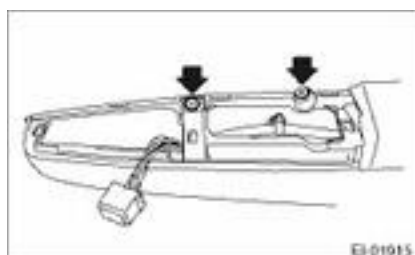


- 6.** Remove the door trim.




(1) Remove the clips, then lift the door trim.

NOTE:

Insert a plastic clip remover into the slit at the bottom of the door trim, to lift the door trim.

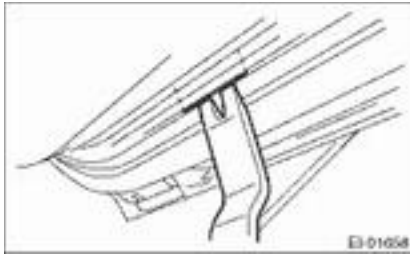


(2) Remove the cable (1) and (2) from the cable holder of inner remote.

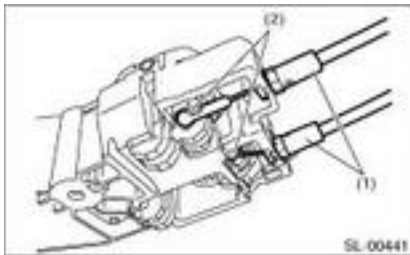


(3) Disconnect the harness connector and remove the door trim.

GLASS/WINDOWS/MIRRORS > Outer Mirror Assembly

REMOVAL

1. Remove the front door trim. 
2. Disconnect the outer mirror connector.
3. Remove the bolts to remove outer mirror assembly.

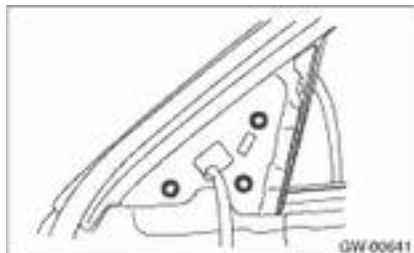

GLASS/WINDOWS/MIRRORS > Outer Mirror Assembly

INSTALLATION

Install in the reverse order of removal.


Tightening torque:

4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

GLASS/WINDOWS/MIRRORS > Outer Mirror

REPLACEMENT

1. Face the mirror upward.
2. Lift the lower part of the mirror and the outer side, and remove fitting (1) and (2).

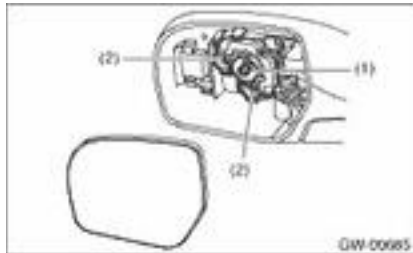

3. Disconnect the mirror heater connector from side of the mirror. (Model with mirror heater)




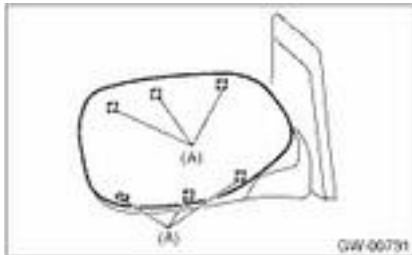
4. Attach a mirror to the fitting area (1), and attach the worm to the fitting area (2).

CAUTION:


- When removing the mirror, be careful not to scratch the reverse side of the mirror with a flat screw driver.
- When installing the mirror, make sure to securely insert the hook and clip.

GLASS/WINDOWS/MIRRORS > Scalp Cap**REPLACEMENT**

1. Remove the mirror. 
2. Detach claw (A) from the inner side of the outer mirror, and remove the scalp cap.



3. Detach claw (A) and (B) from the inner side of the outer mirror, and remove the mirror body cover.

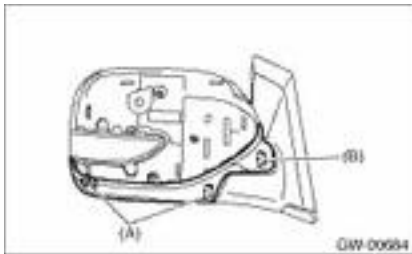**CAUTION:**

Claw (B) cannot be removed from the inner side of the outer mirror. Be careful not to damage when removing.

4. Securely install the scalp cap and mirror body cover clip (A).

