


WIRING DIAGRAM

4. ANTI-LOCK BRAKE SYSTEM


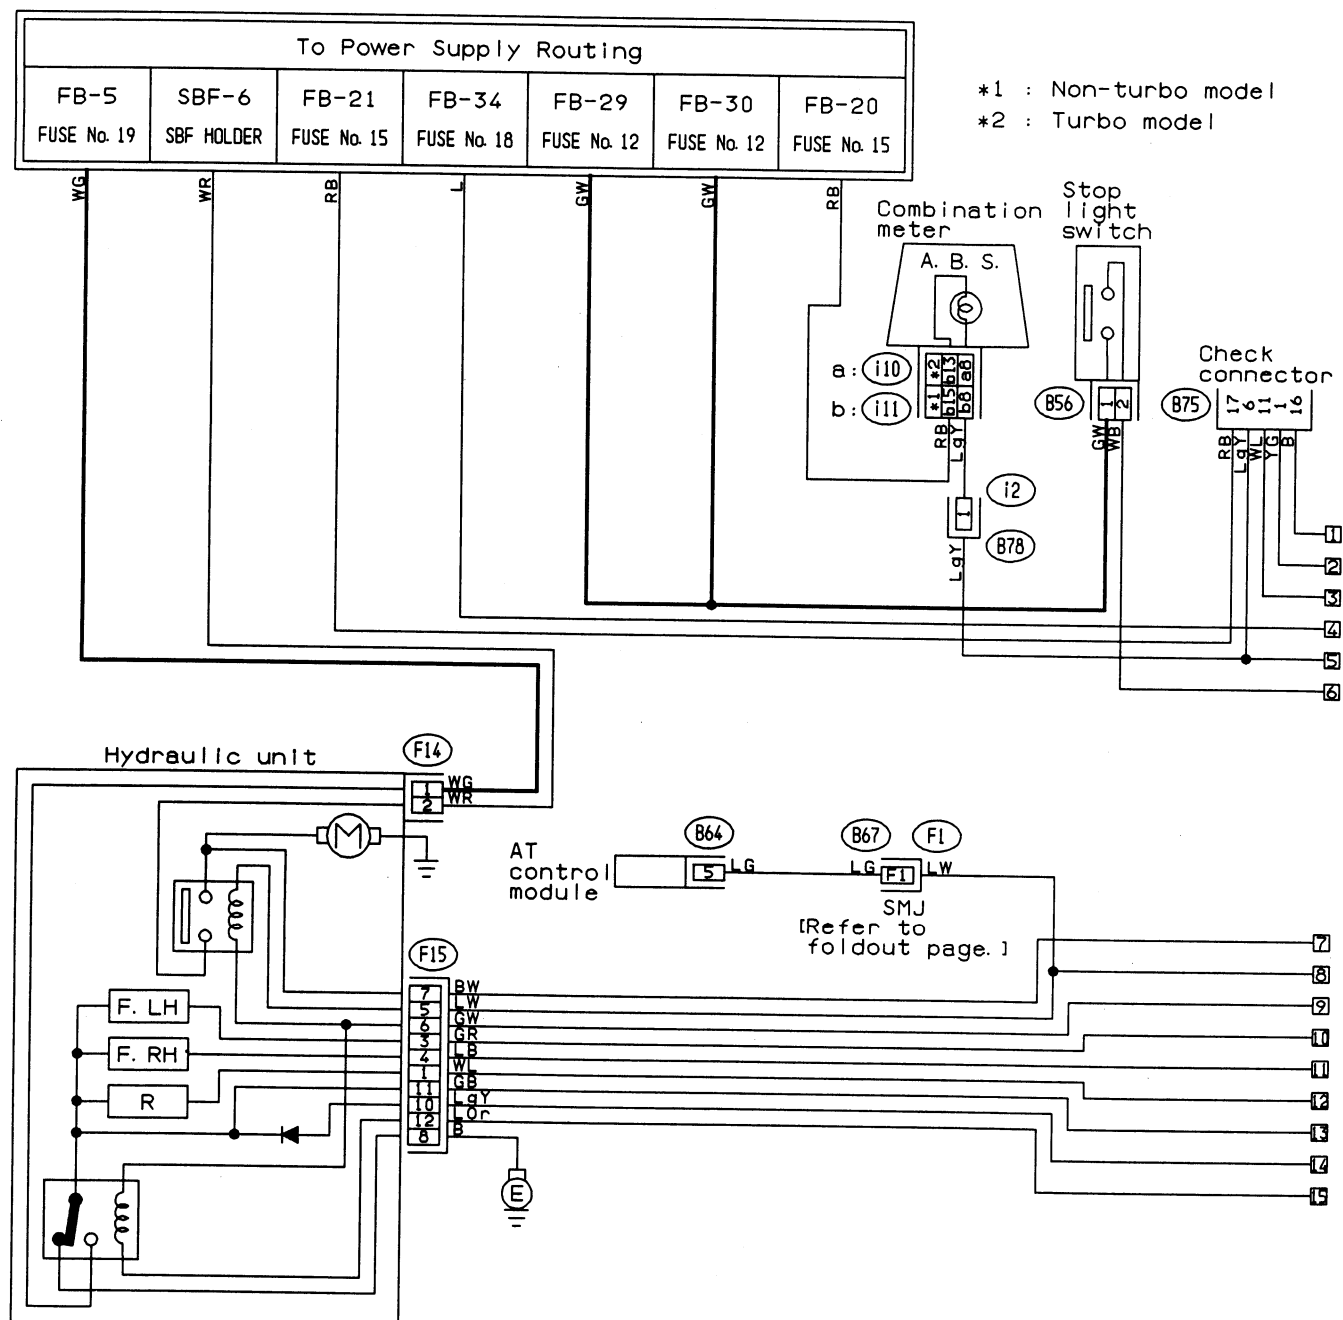


(Black) (B56) (F14) (Gray)

(F15) (Black)

(B64) (Black)




(12)





(12)

(B75) (Black)


(Gray) (i10) (i11) (Gray)



GR82-03A

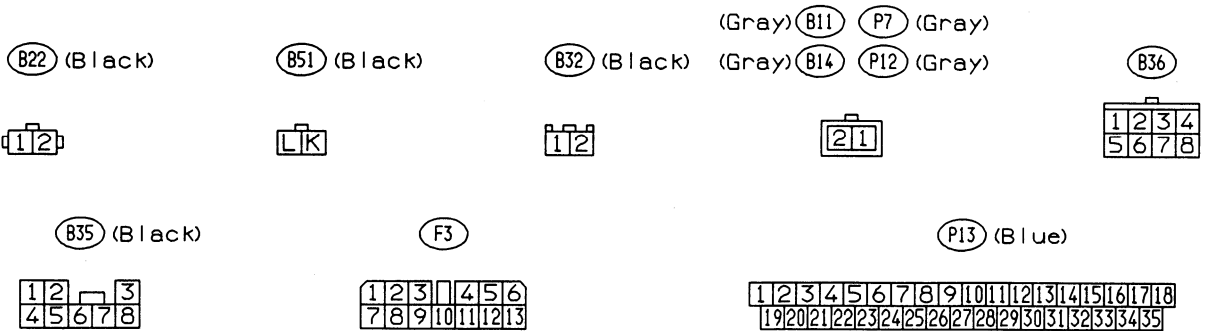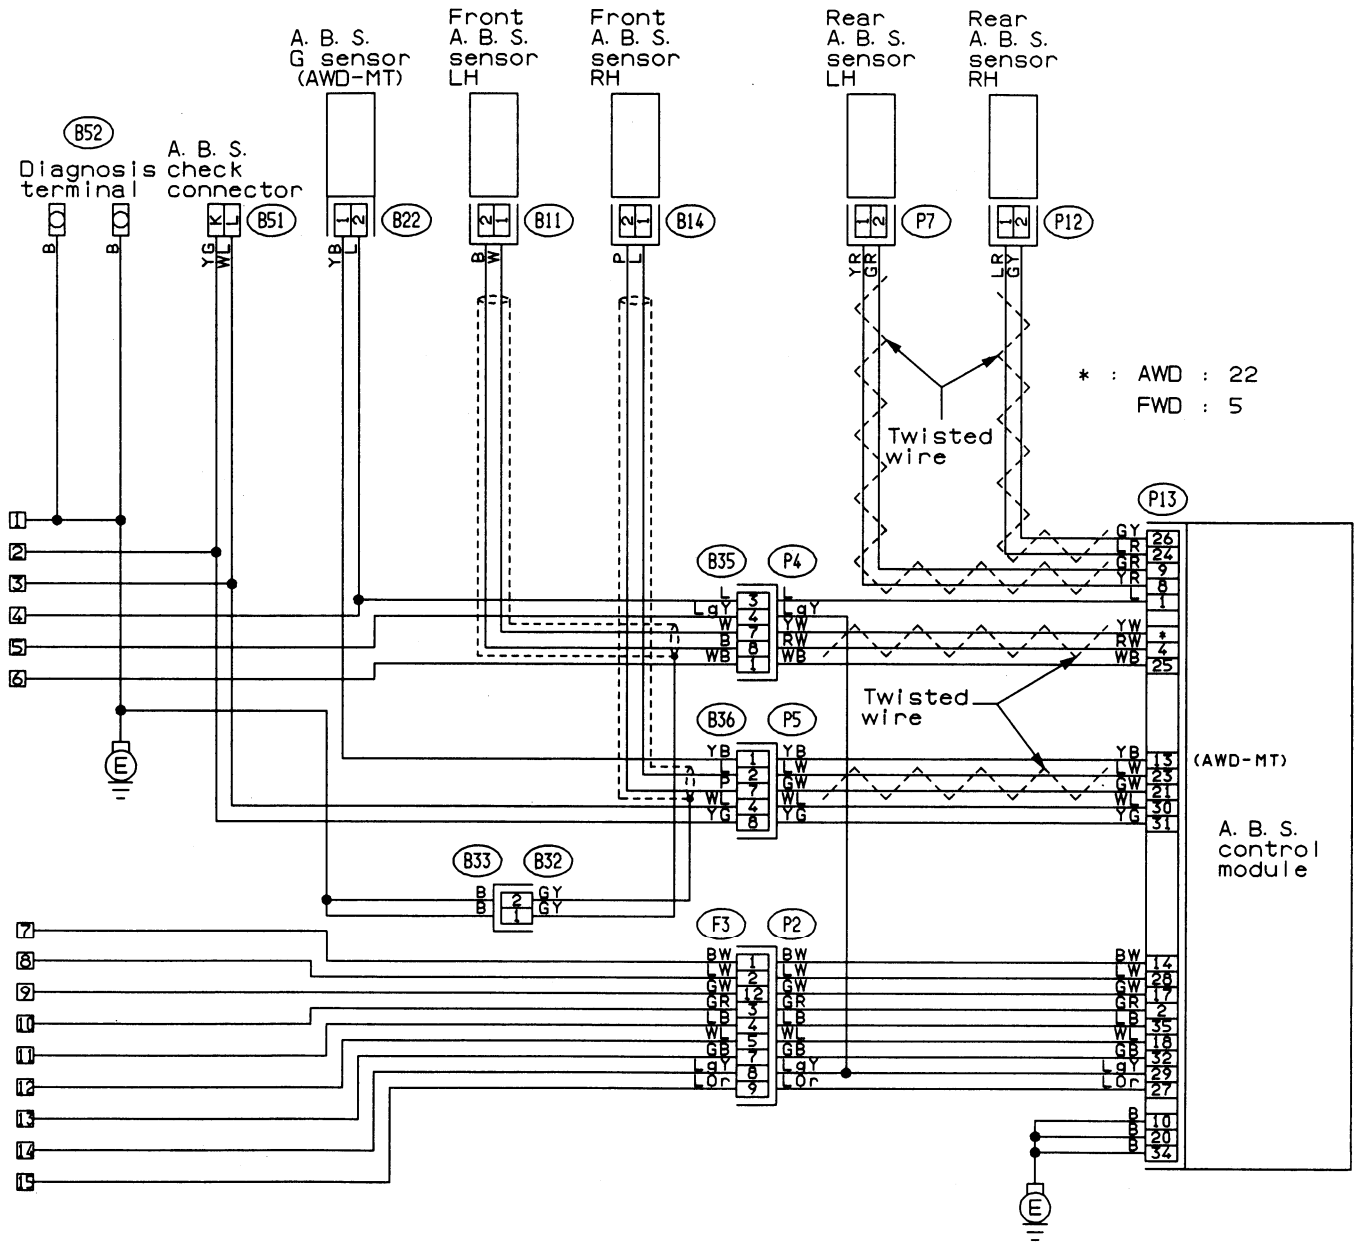

5. INSTRUMENT PANEL WIRING HARNESS AND GROUND POINT

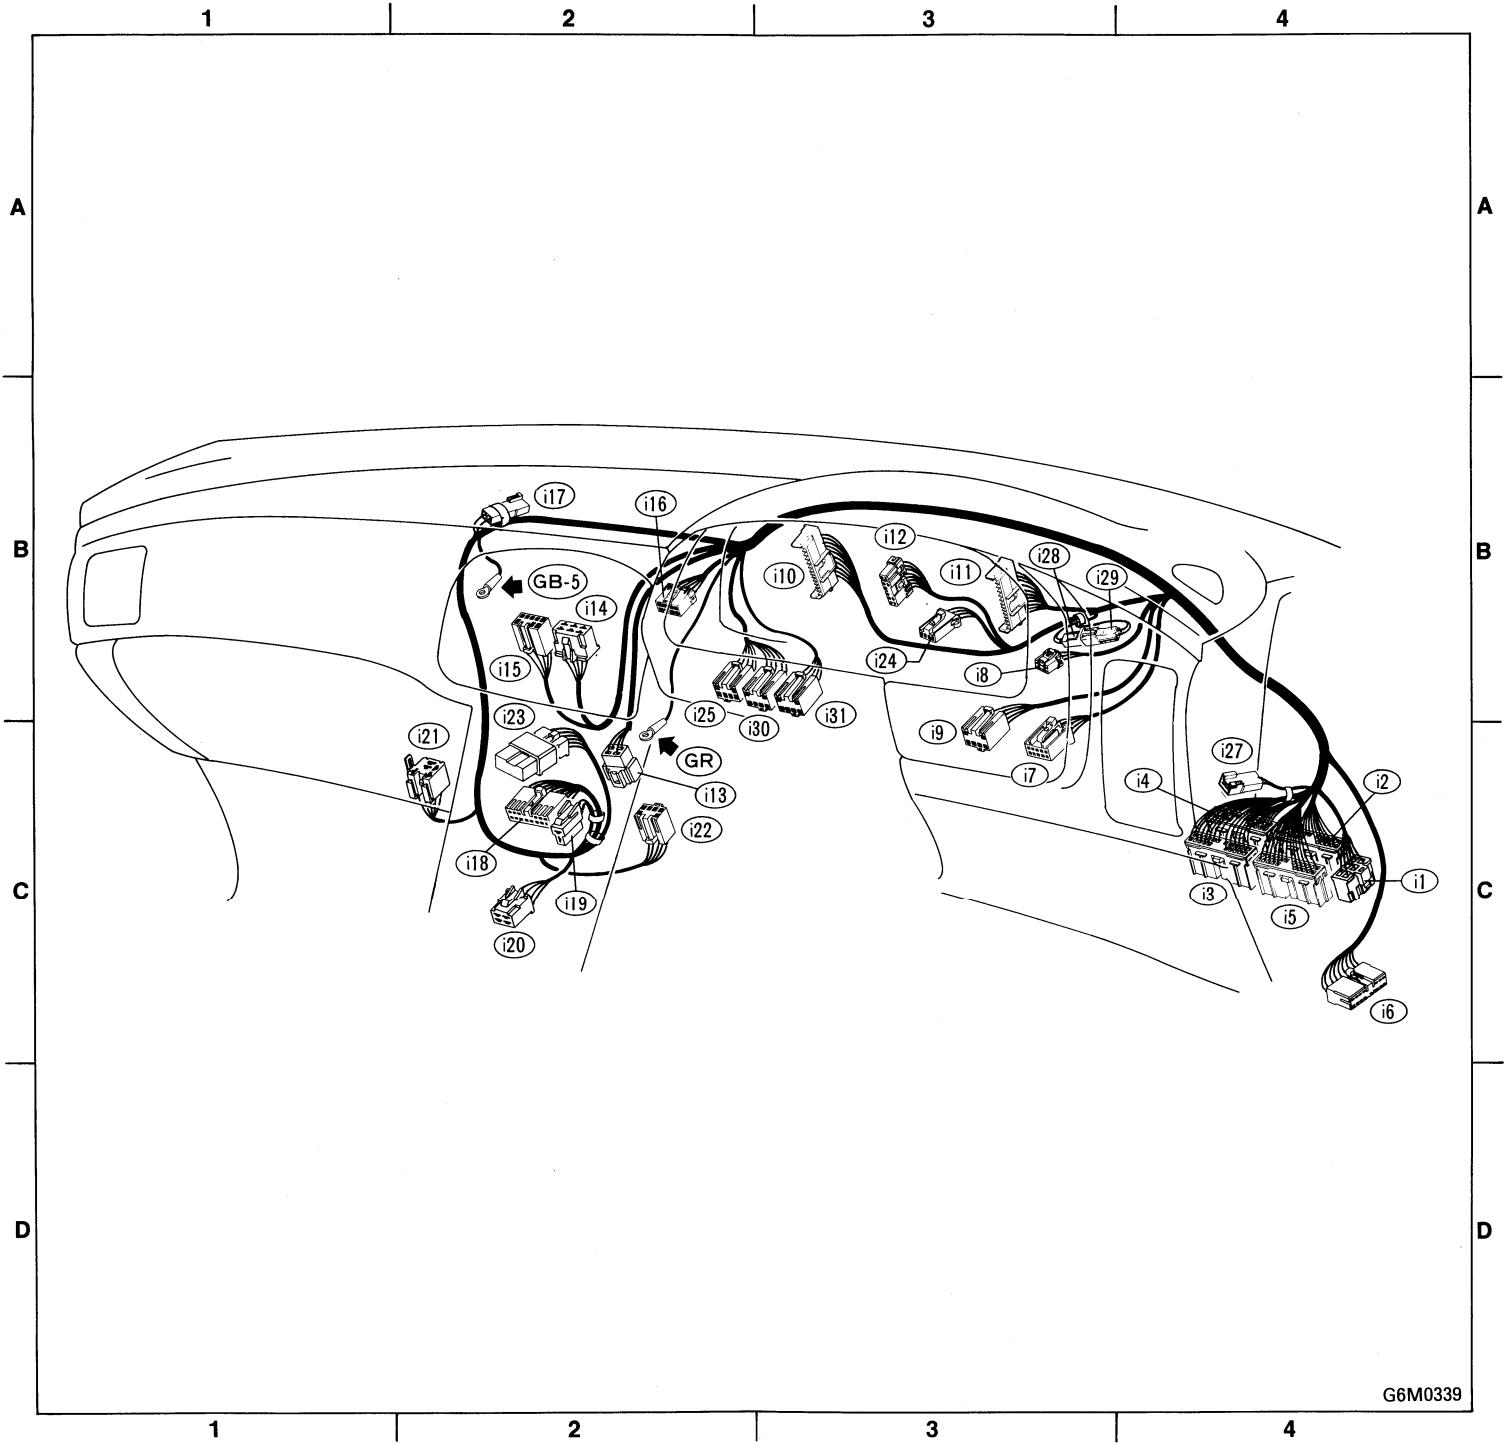

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	40	Gray	B1	B68	Bulkhead wiring harness (S.M.J.)
R2	1		B3		Parking brake switch
R3	2		C2		Economy switch (AT)
R4	2		C2		Select lever illumination light (AT)
R5	6	Blue	B3		Manual switch (AT)
R6	1	Brown	B2		Front door switch RH
R7	2	Pink	B2	D16	Rear door adapter cord RH
R8	1	Brown	C3		Front door switch LH
R9	2	Pink	C3	D19	Rear door adapter cord LH
R10	1	Brown	B4		Rear door switch LH
R11	6	Black	B3	R46	Fuel tank cord
R12	1	Brown	B3		Rear door switch RH
R32	7		B3		Headlight leveling switch
R40	2	Green	B2	B72	Bulkhead wiring harness
R41	2		B3		Room light
R42	5	Black	C3	B38	Bulkhead wiring harness
R43	2		B3		Spot light
R44	4		B3		Sunroof switch
R45	2		B3		Sunroof motor
R46	6	Black	B3	R11	Rear wiring harness
R47	6		B3		Fuel gauge unit
R50	2		B4		Fuel gauge sub unit (Turbo model)