

**Thread:** [Problem with Subaru JDM Gauge install on 08STI](#)

[View Single Post](#)

08-21-09, 05:50 AM

#47

[gvfs](#)

Platinum Member

**Car:** [08 OBP STi](#)

**Fav**

**Mod:**

Whiteline  
BSR49X  
XZ

My: [Subaru Parts for sale](#)

Join

Date:

Dec 2008

Location:

SoNH

Posts:

602



**Re: Problem with Subaru JDM Gauge install on 08STI**

Translated.


Quote:

GD is often receive mail from and around the "I want to navigate, not goodwill bought a harness, you may be unsure where tete"

(^^ < Said questions (^ ^ Isuzu

This certainly "not harness goodwill" is connected "OP connector" It is a position we're hard to find and cabling are not familiar with the car.

※ harness the goodwill is not ...

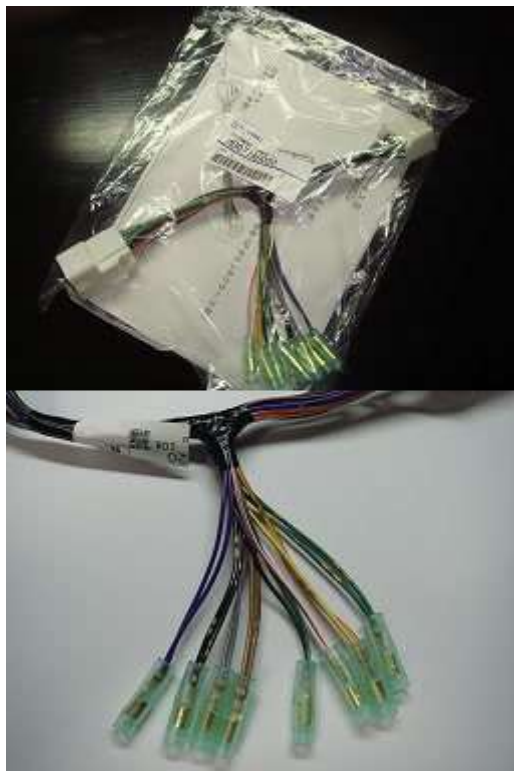

When installing electrical equipment and external car navigation systems, such as power and speed, being sold as genuine Subaru parts to easily connect to a different signal, "Power and signal extraction harness various dedicated" literally.


The **vehicle** is equipped with "**OP connector**" plug into use.

Giboshi so with a terminal, and power is easy to take Wake here.


Subaru dealers can buy. (Part number: H0077AG020) the price is about 2 yen.

OP have a connector, but is positionally per'm on the gas pedal, I'll understand and easy to explain in some more pictures.

※ To avoid the danger of such work, including short,外 Shimashou the battery negative terminal first.

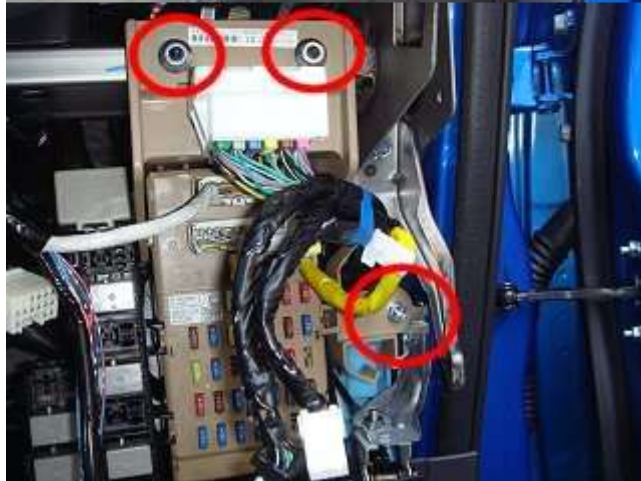

The photo above (left), who rose to the interior so far, please visit the page.  
The photo above (right) portion of the fuse box and disconnect ○ nut using a box wrench and bolts.

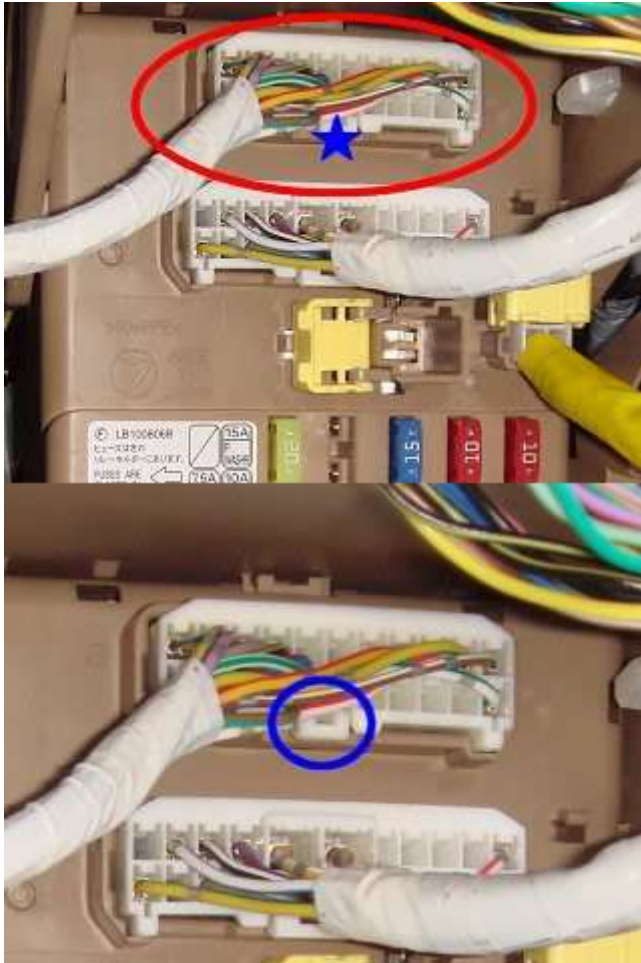

The photo above (left) ○ Unplug the connector. ★ exit in the direction you press on 引 Ki 抜 Ke part.  
The photo above (right) connectors to enlarge photo. The press is here.





The photo above (left) pulled in front of the fuse box issue.  
The photo above (right) after the fuse box, which is bound with tape "OP connector" is.  
Here "not harness goodwill" into my use.

※ If you have installed a car navigation system and the tape was removed from the OP may already have other cables connected to the connector. Once the case is by far the OP connector, so if you add in a harness connected to a goodwill not OK.

Interior without the rose-ending way, DIY People who used to work, work if you ask enough 潜 Ri 込 Ma the feet of the driver's seat is a little head with the cabling or the beautiful roses together is recommended to work with. (^ ^ > (^ ^ Isuzu

The "not harness goodwill" Do not use the "OP connector" You can also connect directly to the wiring.  
Are from and sold Emon 工業 "wire connector" is to use.





↑ is available simply by pinching the wire "wire connector"  
 Use the pliers and tucked the wire with pliers and as pictured on the right.  
 (Number made Emon 工業: E488 Product Name: Wire Connector)



Major components of each wire, is as follows.

⚠ This image has been resized. Click this bar to view the full image. The origin 703x275.

Number	Wire Color	
1	White / red	Constant power (battery power)
Two	Yellow / red	Power Accessories
Three	Green / Yellow	IG Power
Four	Purple	Illumination power
Five	Pink / Green	Speed signal
Six	Brown / Yellow	Back light
7	Black	Earth Body
8	Ash	Parking switch signal
11	Green / Yellow	Door switch signal
12	Yellow / Blue	Riyagetosuitchi signal
13	Tea	Alternator signal

[http://i670.photobucket.com/albums/vv68/gvfs\\_rocketmail/STI/harness\\_plug\\_pinouts2.jpg](http://i670.photobucket.com/albums/vv68/gvfs_rocketmail/STI/harness_plug_pinouts2.jpg)

Thus, the most likely thing here TEAR. (^-^ ) v (^-^ ) V

Of stuck here, the indicator (hazard) you much.  
If you want power only after the more easily you can take directly from the fuse  
well. This per later to enjoy it in the notes ~ (^-^) Bruno

